
## You will need:

- .Wood Glue
- .Craft Knife
- .Sandpaper


## How To Build: Small WTC Ruin

Always test fit pieces before applying any glue. Lightly sand the places where you wish to apply glue, this helps to create a stronger bond between the two surfaces. Always use a strong wood glue, craft pva glue is not recommended.

1. Carefully remove all the pieces from the sprue, being extra careful on the smaller, more delicate parts. We recommend cutting the tabs with a sharp craft knife to prevent any accidental damage.

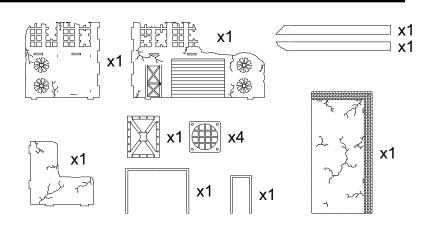


2. Take the front wall and the two door frames, and glue them in place as shown, making sure they do not overhang the bottom edge

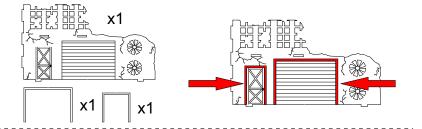


3. Take two of the vent covers, and glue them in place as shown.





4. Now add the vertical strip. The top of the strip should slope away from the corner of the wall.

Make sure to remove any glue from the corner tabs/floor slots



5. Now take the short side, and the last two vent covers, and glue them in place as shown.



