

# TERRAIN FORGE


You will need:

- .Wood Glue
- .Craft Knife
- .Sandpaper


## How To Build: GT Pack Medium L

Always test fit pieces before applying any glue. Lightly sand the places where you wish to apply glue, this helps to create a stronger bond between the two surfaces. Always use a strong wood glue, craft pva glue is not recommended.


1. Carefully remove all the pieces from the sprue, being extra careful on the smaller, more delicate parts. We recommend cutting the tabs with a sharp craft knife to prevent any accidental damage.

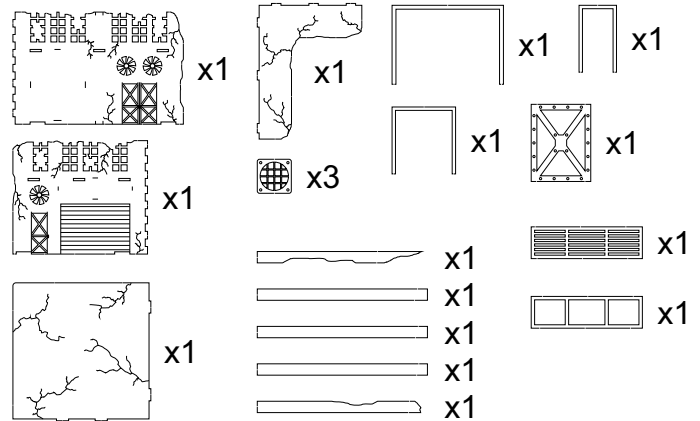


2. Take the front wall and two of the vent covers, and glue them in place as shown

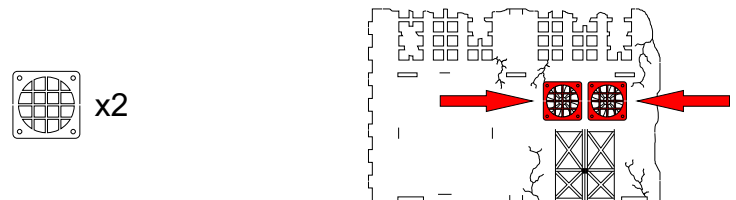


3. Take the panel piece and the door frame, and glue them in place as shown, making sure the door frame does not overhang the bottom edge. You should see some guidelines on the wall, which will help with aligning the panel.

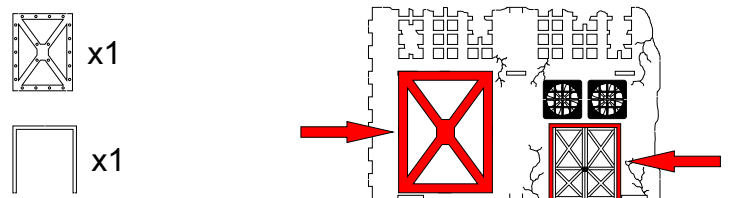



4. Now take 3 of the vertical strips, and glue them in place. Dry fit these first to make sure you have the correct pieces. The edge of the strip should follow the shape of the wall

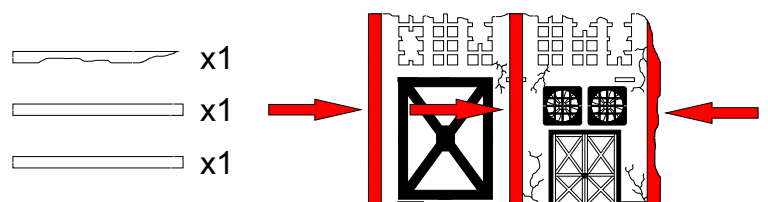




5. Take the side wall and the two remaining door frames, and glue them in place as shown, making sure they do not overhang the bottom edge

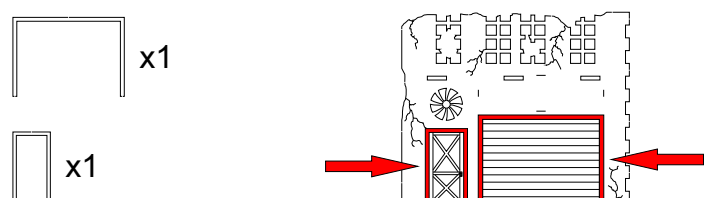



6. Now take the long square vent, and the remaining small vent cover, and glue them in place as shown

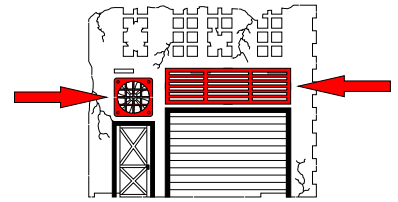



7. Now take the large square vent frame, and the two remaining vertical strips, and glue them in place as shown

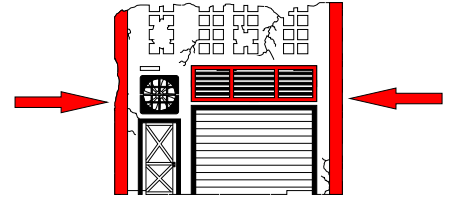



8. Slot the floor piece into the front wall, using the floor slots and tabs as shown

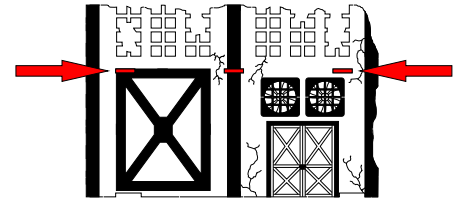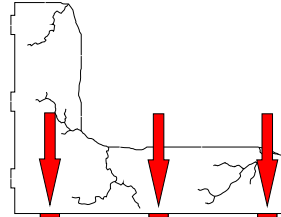

9. Now take the side wall, and join it to the front wall by using the floor tabs/slots, and the corner tabs as shown

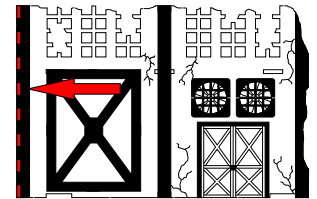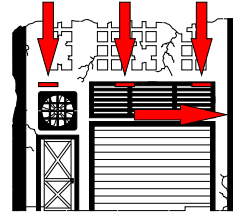

10. Now slot the finished building onto the base piece

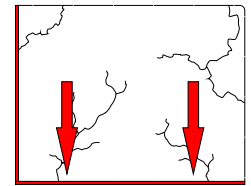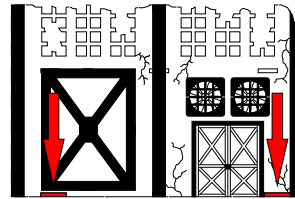

11. Your GT Pack Medium L is now complete